

Arrogant Bastard Quake LAN Gaming keyboard

Light settings

On/Off = FN + Scroll Lock

Brightness (up) = FN + `

Brightness (down) = FN + ?

Pulsate/breathing = FN + Home

61399

www.arrogantbastard.co.uk

Box 50435, Malmö, Sweden